



Reindeer Cove, NWA-S46

Center of map at 64° 30.55' N Lat., 161° 04.42' W Lon.

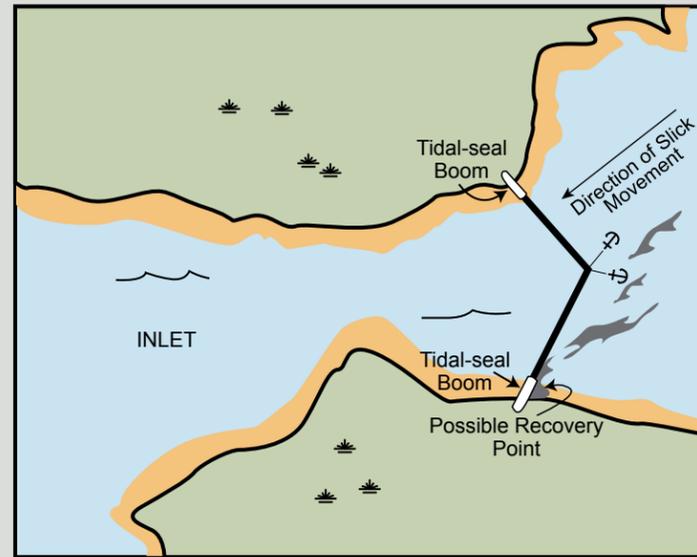

An example of the *Exclusion Booming Tactic*. Actual deployment should be adjusted for local conditions.

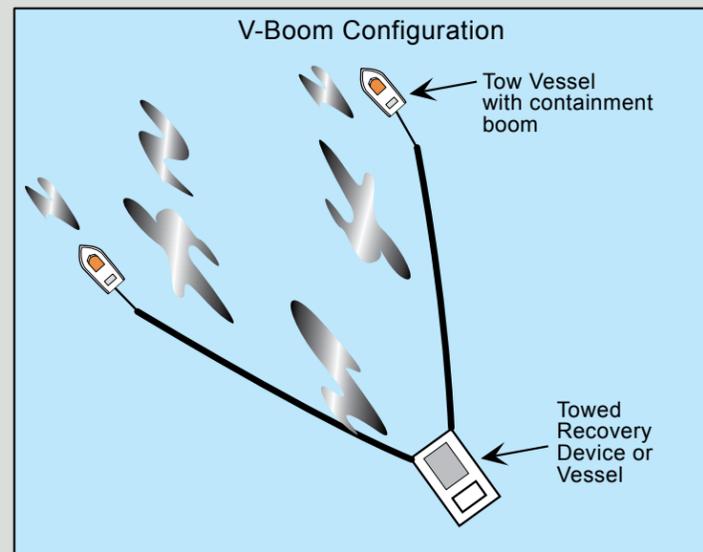

An example of the *Free-oil Recovery*. Actual deployment should be adjusted for local conditions.

Map Legend

-  Free-oil Recovery
-  Bears in Area, Guards Recommended

Aerial photography of this area is unavailable at this time, but may be included as it becomes available.

Geographic Response Strategies for Northwest Arctic Subarea, Southern Zone



This is not intended for navigational use.

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
S-46-01 	Reindeer Cove Nearshore waters in the general area of: Lat. 64° 30.41 N Lon. 161°04.50 W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Reindeer Cove depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of Reindeer Cove. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	28nm to Koyuk	Via marine waters Chart 16200_1	Birds: waterfowl concentration, shorebird concentration, seabird nesting Fish: herring spawning Habitat: marsh, gravel beaches, sheltered tidal flats	Vessel master should have local knowledge. Consult the ADEC “Spill Tactics for Alaska Responders” manual for additional information on the deployment of these tactics. Consult the Site Selection Matrix for the Cultural Resources Designation. Use extreme caution, shoal waters with numerous reefs and rocks.

NOTE: Sensitive resource information can be found on other maps which can be accessed through the sensitive area section of the NWA Sub-Area Contingency Plan: http://dec.alaska.gov/spar/perp/plans/scp_nwa.htm.